



8700 Series

Ultra-Wide-Bandwidth,
High-Power Switch-Mode Amplifiers

AE Techron's 8700 Series amplifiers are 400Vp, low-noise, DC-to-250 kHz switch-mode amplifiers. The 8700 series provides a unique combination of switch-mode and linear amplifiers. Switch-mode efficiency is combined with a low noise floor and THD, while also benefitting from high slew rates and wide bandwidth. The 8700 series is also able to safely drive both reactive and resistive loads of varying impedances with no loss in rated output power.


8700 series amplifiers pack a lot of power into a small package. They are able to produce surge power ratings at up to 2.5X continuous and process apparent power at levels up to 4X the continuous power ratings. This makes an 8700 series amplifier an ideal choice for many difficult-to-drive reactive loads.

This combination of features makes the 8700 series an ideal solution for a wide range of high-current,

- Bandwidth** DC to 250 kHz
- Slew rate** Up to 300V/ μ s
- Voltage** 0 to 250 V_{RMS}
0 to 350 VDC
- Current** Up to 60 to 360 A_{RMS}*
- Distortion** <0.8%
- Power** 4 kW to 24 kW*
- Power levels up to 4X rated power when driving reactive loads**
- Drives loads PF 0 to 1**

*Models available with output power from 4 kW to 24 kW (capable of up to 96 kVA).

low-voltage applications that require both DC power and quick surges or drop-outs, like those found in conducted immunity testing of DC-powered systems in the automotive and aviation markets.

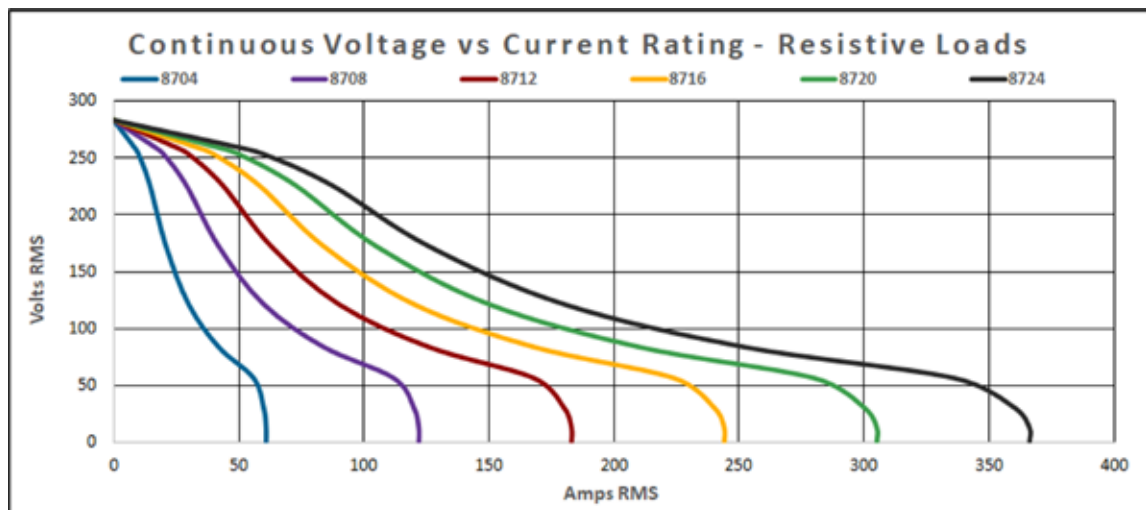

Specifications

8704

Maximum Continuous Output Current: 60A_{RMS}
Surge Rating: 2X power at up to 400 V_P or 150A
Apparent Power Rating: Up to 4X continuous power rating at up to 400 V_P or 150A
Supply Voltage: Single-phase, 208V ±10%, 30A, 50/60 Hz; 230V/240V ±10%, 30A version available
Dimensions (HxWxD): 5.25 x 19.0 x 25.26 in. (13.34 x 48.26 x 64.16 cm)
Weight: Approximately 84 lbs. (38.1 kg)

8708

Maximum Continuous Output Current: 120A_{RMS}
Surge Rating: 2X power at up to 400 V_P or 300A
Apparent Power Rating: Up to 4X continuous power rating at up to 400 V_P or 300A
Supply Voltage: Three-phase 208V ±10%, 30A, 50/60 Hz; 400V ±10%, 30A version available.
Dimensions (HxWxD): 35.05 x 22.56 x 31.56 in. (89.03 x 57.3 x 80.16 cm)
Weight: Approximately 290 lbs. (131.5 kg)

8712

Maximum Continuous Output Current: 180A_{RMS}
Surge Rating: 2X power at up to 400 V_P or 450A
Apparent Power Rating: Up to 4X continuous power rating at up to 400 V_P or 450A
Supply Voltage: Three-phase 208V ±10%, 30A, 50/60 Hz; 400V ±10%, 30A version available.
Dimensions (HxWxD): 35.05 x 22.56 x 31.56 in. (89.03 x 57.3 x 80.16 cm)
Weight: Approximately 370 lbs. (167.8 kg)

8716

Maximum Continuous Output Current: 240A_{RMS}
Surge Rating: 2X power at up to 400 V_P or 600A
Apparent Power Rating: Up to 4X continuous power rating at up to 600 V_P or 300A
Supply Voltage: Three-phase 208V ±10%, 60A, 50/60 Hz; 400V ±10%, 60A version available.
Dimensions (HxWxD): 42.05 x 22.56 x 31.56 inches (106.81 x 57.3 x 80.16 cm)
Weight: Approximately 460 lbs. (208.7 kg)

8720

Maximum Continuous Output Current: 300A_{RMS}
Surge Rating: 2X power at up to 400 V_P or 750A
Apparent Power Rating: Up to 4X continuous power rating at up to 400 V_P or 750A
Supply Voltage: Three-phase 208V ±10%, 60A, 50/60 Hz; 400V ±10%, 60A version available.
Dimensions (HxWxD): 45.80 x 22.56 x 31.56 inches (116.33 x 57.3 x 80.16 cm)
Weight: Approximately 540 lbs. (244.9 kg)


8724

Maximum Continuous Output Current: 360A_{RMS}
Surge Rating: 2X power at up to 400 V_P or 900A
Apparent Power Rating: Up to 4X continuous power rating at up to 400 V_P or 900A
Supply Voltage: Three-phase 208V ±10%, 60A, 50/60 Hz; 400V ±10%, 60A version available.
Dimensions (HxWxD): 51.05 x 22.56 x 31.56 inches (129.67 x 57.3 x 80.16 cm)
Weight: Approximately 620 lbs. (281.2 kg)

Note: 8708, 8712, 8716, 8720 and 8724 model dimensions and weights are subject to change.

	Continuous Output Current					
	8704	8708	8712	8716	8720	8724
13.5 VDC	55A	110A	165A	220A	275A	330A
24 VDC	55A	110A	165A	220A	275A	330A
48 VDC	55A	110A	165A	220A	275A	330A
60 VAC	60A	120A	180A	240A	300A	360A
120 VAC	32A	64A	96A	128A	160A	180A
230 VAC	10A	20A	30A	40A	50A	60A

Performance data is for a purely resistive load; performance will be improved into loads that are partially or completely reactive.

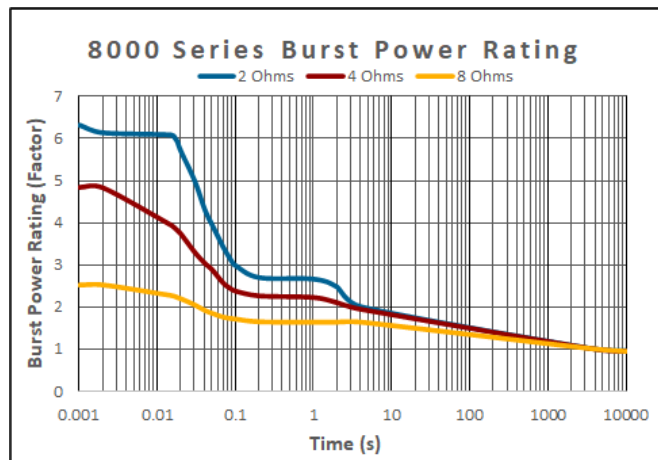

Common Data (all 8700 series models)

Operating Modes: AC, DC and AC + DC
Frequency, AC Mode Output (-3 dB): DC - 250 kHz
Max Voltage Ranges (no load),
 AC: 0 - 260 V_{RMS}
 AC + DC: 0 - ±400 V_p
Load Regulation (full scale): <0.025%, DC to 100 Hz;
 <0.05%, 100 Hz to 10 kHz
Line Regulation (full scale): <0.1% for 10% line change
External Sense: Voltage-drop compensation sense line
Harmonic Distortion (80 kHz, low-passed): Less than
 0.3% from 10 Hz to 30 kHz; 0.5% up to 50 kHz
Harmonic Distortion (30 kHz, low-passed): Less than
 0.1% from 10 Hz to 50 kHz
DC Offset: <10 mV
Distortion: <1.0%
Voltage Slew Rate: Load dependent; up to 300V per μs,
 typically 8 μs for 10% to 90% of full-scale change,
 depending on load and power
Efficiency: 85%, typical

Power Factor: .72, typical
Source Impedance: 2.7 mΩ + 1.25 μH
Cooling: Internal forced-air fans
Protection: Over/under voltage, over current,
 over temperature
Input, Signal In: BNC connector (unbalanced);
 terminal strip (balanced)
Output: 3/8-inch high-current post connectors
Operating Environment,
 Temperature: 5 °C to 50 °C (41 °F to 122 °F);
 Maximum output power de-rated above 30 °C (86 °F)
 Humidity: Maximum relative humidity 80% for
 temperatures up to 31 °C decreasing linearly
 to 50% relative humidity at 40 °C
 Altitude: 3000 m Maximum
 Environment: Indoor Use Only, Pollution degree 2
Equipment Class: Group 1 Class A
Transient Overvoltage: Overvoltage Category II

